AZERA QUICK REFERENCE GUIDE

HYUNDAI

INSTRUMENT PANEL

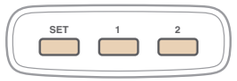

1: IMS (Integrated Memory System) (If Equipped)

The Integrated Memory System controls are located on the driver's door trim.

MEMORIZING DRIVER POSITION

1. Place the shift lever into Park (P) while the ignition switch is ON.
2. Adjust the driver's seat, outside rearview mirrors and steering wheel column (with electric tilt and telescopic type) to the desired position.
3. Push the SET button on the IMS until the signal beeps.
4. Within five seconds, push button 1 or 2 until the signal beeps twice. The beep confirms that the positions are memorized in the I.M.S.

TO ACTIVATE THE MEMORIZED POSITION

1. Place the shift lever into Park (P) while the ignition switch is ON.
2. When you push button 1 or 2, the driving position will be automatically adjusted to the position recorded for that button. See Owner's Manual for conditions in which IMS will not operate.

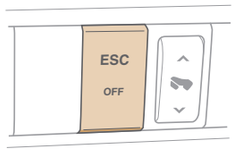

2: Electronic Stability Control (ESC)

The ESC system is designed to help the driver maintain vehicle control under adverse driving conditions. The indicator light in the instrument panel will illuminate for 6 seconds after the key is turned ON. If the light remains illuminated, take your car to a Hyundai dealer. If you turn the system off by pressing the ESC switch, the ESC OFF indicator will illuminate and stay on. In the ESC OFF mode, the stability control will be deactivated. Adjust your driving accordingly. To turn the system back on, press the switch again. The ESC OFF indicator will turn off.

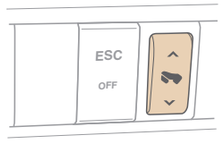

3: Adjustable Pedals

Turn the ignition key to the ON position with the selector lever in the Park (P) position and push the switch.

If you move the ⌃ portion of the switch, the pedals move rearward.

If you move the ⌄ portion of the switch, the pedals move forward.

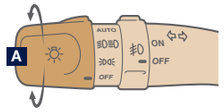

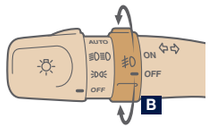

4: Headlights and Fog Lights

A HEADLIGHT SWITCH

To operate the headlights, turn the switch on the end of the lever:
OFF – Headlights are off
– Parking lights
– Headlights
AUTO – Auto Light (If Equipped)
NOTE: The ignition must be in the ON position to turn on the headlights.

High Beam Activation: Push the lever forward
Flash-To-Pass Feature: Pull the lever towards you and release

B FOG LIGHT SWITCH

Rotate the switch to the ON position.
NOTE: Fog lights will only function on low beam.

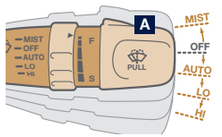

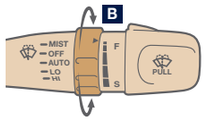

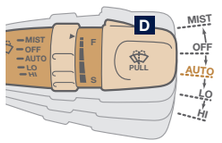

5: Windshield Wiper / Washer

A WIPER SPEED

The windshield wiper switch has four positions: intermittent or AUTO (if equipped), low speed, high speed and mist. For mist (single wipe), move the lever up one position.

B INTERMITTENT OPERATION

With the windshield wiper switch in the INT position, the interval between wipes can be varied by turning the intermittent wiper switch.

C WIPE / WASH OPERATION

To use the windshield washer, pull the wiper / washer lever toward you. When the washer is operated, the wipers automatically make two passes across the windshield. The washer continues to operate until the lever is released.

D AUTO WIPER OPERATION (If Equipped)

When the windshield wiper switch is placed in the AUTO position, the rain sensor, located on the windshield behind the rearview mirror, senses the amount of rainfall and controls for the appropriate length of the intervals between wipes appropriately.

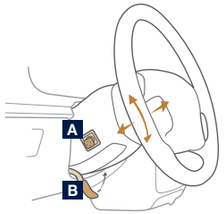

6: Adjustable Steering Wheel

A POWER ADJUSTABLE STEERING COLUMN (If Equipped)
To adjust the steering wheel to the desired position, operate the adjusting switch on the left side of the steering wheel.

B MANUAL ADJUSTABLE TILT AND TELESCOPIC STEERING COLUMN
Pull the lever downward to unlock the steering wheel. Adjust the steering wheel up or down and forward or backward to the desired position. After adjustment, securely tighten the lever by pushing it upward.

NOTE: Do not adjust while driving.

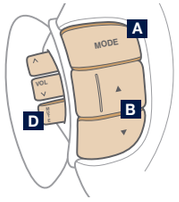

7: Steering Wheel Audio Controls

A MODE
B SEEK – Press once to change tracks. Press and hold to fast forward or rewind.
C VOLUME (▲ / ▼)
D MUTE

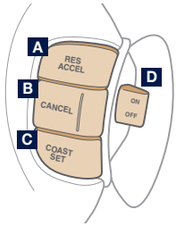

8: Cruise Control

A RES (Resume) / ACCEL
B CANCEL
C COAST / SET
D ON / OFF – Press to activate the system.

9: Clock Adjustment

There are three control buttons for the digital clock. Their functions are:

H: Push “H” to advance the hours.
M: Push "M" to advance the minutes.
R: Push "R" to reset minutes to ":00". Continue to press and hold the “R” button to toggle between military time and standard time.

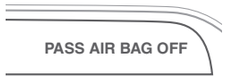

10: Occupant Classification System

PASSENGER AIR BAG OFF INDICATOR
The indicator will illuminate when you turn the ignition key to ON or START. The light will not illuminate when the passenger's air bag is enabled. The occupant classification system will disable the right front passenger's air bags under certain conditions (light on). Refer to the Owner’s Manual for a complete description of this system.

NOTE: The driver's air bag and the side impact air bag are not part of the occupant classification system.

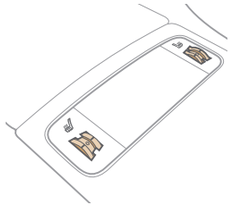

11: Seat Warmer (If Equipped)

The front seats can be electrically heated individually when the ignition switch is on. When the switch is on, a number ranging from 1 to 5 is displayed on the switch (5 = warmest setting). To turn off the seat warmer, set the switch to 0.

NOTE: The seat warmer may not operate if the ambient temperature is warm.

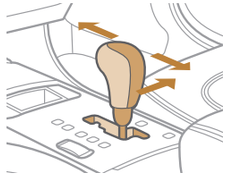

12: Transmission / Shiftronic™ (If Equipped)

Whether the vehicle is stationary or in motion, sports mode is selected by pushing the selector lever from the D position into the manual gate. To return to D range operation, push the selector lever back into the main gate. In sports mode, moving the selector lever backwards and forwards can make rapid gearshifts simple. In contrast to a manual transaxle, the sports mode allows gearshifts with the accelerator pedal depressed.

UP (+): Push the lever forward once to shift up one gear.
DOWN (-): Pull the lever backwards once to shift down one gear.
SKIP: By rapidly moving the selector forward or backward twice, it is possible to skip one gear.

NOTE: Shift lever in Neutral (N), Drive (D), or Reverse (R) position still allows for the ignition key to be turned off.

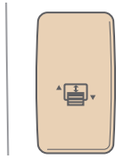

13: Power Rear Sunshade (If Equipped)

The rear window shade switch is located on the center console.

Press the curtain switch to raise or lower the rear window curtain.

NOTE: When the shift lever is shifted into Reverse (R), the rear window curtain will automatically lower if the curtain is in the raised position.

14: Audio System (AM / FM / Cassette / 6-CD / MP3 Audio System Shown)

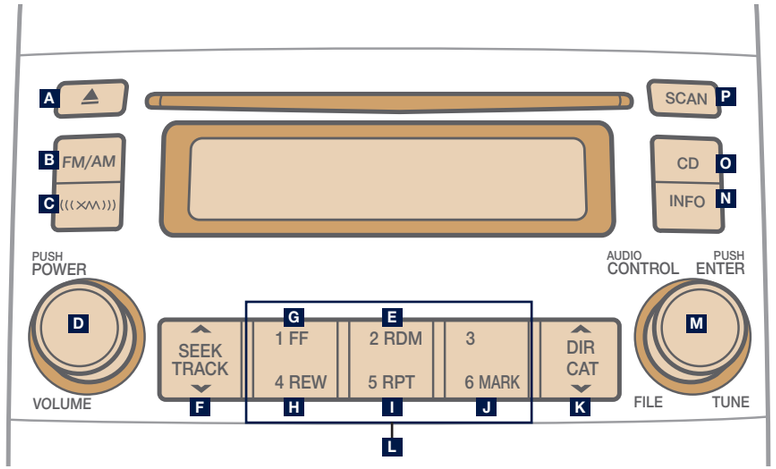

AUDIO SYSTEM CONTROLS

D PUSH POWER/VOLUME – Push to turn the radio on/off. Turn to adjust the volume.

AM/FM RADIO CONTROLS

M TUNE – Press to adjust the audio settings: Equalizer, Bass, Midrange, Treble, speaker Balance and speaker Fade.

B FM/AM – Press to select the radio FM/AM frequency band.

F SEEK/TRACK – Press to find the next/previous radio station on the frequency band.

L PRESET STATION SELECT BUTTONS – Save up to six stations in each audio mode (AM/FM1/FM2/XM1/XM2/XM3).

XM RADIO CONTROLS

C XM – Press XM to activate XM mode. Press again to scroll through XM1/XM2/XM3 bands.

M CHANNEL – To change channels, turn the TUNE knob. To select the channel, press the TUNE knob. Alternatively, use the SEEK/TRACK arrows to move through channels rapidly.

K CATEGORY – Use the DIR/CAT arrow buttons to change the music genre. Press the TUNE knob to make the selection.

P SCAN – Press SCAN to only play the first 10 seconds of each channel.

P SCAN ALL – Press and hold SCAN for 2 seconds to scan through the preset channels.

N INFO – Press INFO to display title/artist/category information.

CD/MP3 CONTROLS

A ⏏ (CD EJECT) – Press to stop and eject a CD.

K DIR/CAT – Press to change MP3 directories.

J BOOKMARK

E RDM (RANDOM) – Press to change the CD mode: Random Disc, Random Directory (MP3 only) and Random Off.

F SEEK/TRACK – Press to select the next/previous track on the CD.

G FF – Press and hold to fast forward.

H REW – Press and hold to rewind.

I RPT (REPEAT) – Press to change the CD mode: RPT Track, RPT DIR, RPT OFF.

M FILE SEARCH

O CD/MP3 – Press to activate the CD/MP3 mode.

NOTE: The time it takes for the audio system to recognize an MP3 CD may vary greatly depending on the folder layout on the CD.

15: Climate Control

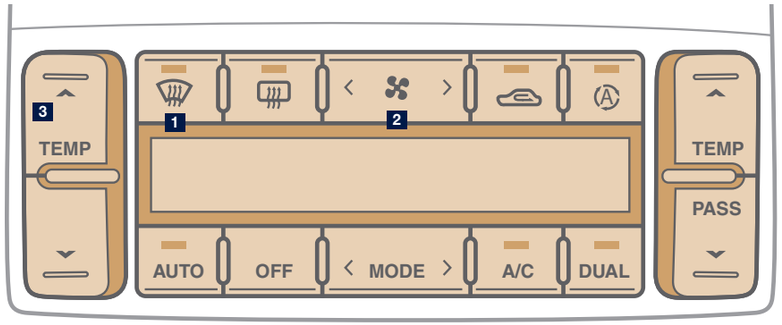

TO REMOVE FROST OR FOG ON THE WINDSHIELD:

1. Set the air flow control to the defrost position. (The A/C will turn on automatically and the "Fresh" mode will be activated.)
2. Set the fan speed control to the maximum speed.
3. Set the temperature control to the desired setting.

NOTE: If the air conditioner filter for the evaporator blower is not replaced per the scheduled maintenance section, excessive window fogging may result. This filter is located in the evaporator housing behind the glove box. Your dealer can replace this filter for you.

DUAL TEMPERATURE CONTROL SELECTION SWITCH

Press the DUAL button to operate the driver and passenger side temperatures individually

Press the DUAL button again to deactivate DUAL mode (The indicator light on the button goes off). The passenger side temperature will be set to the same as the driver side temperature.

AIR QUALITY SYSTEM

The air quality system incorporates a sensor that measures the level of pollution in the outside air. The system will automatically switch over to recirculated mode if the level of air pollutants increases. Press the automatic air recirculation button to turn the air quality system on. The light on the button be illuminate when the system is activated.

16: Trip Computer/Odometer

TRIP COMPUTER

Pushing in the MODE switch when the ignition switch is in ON position changes the display as follows:

TRIPMETER ←
↓
DISTANCE TO EMPTY
↓
AVERAGE SPEED
↓
DRIVE TIME
↓
AVERAGE FUEL CONSUMPTION —

Trip Odometer

With the key ON, press the MODE switch to toggle through the following display modes:

ODO: Records the total distance traveled in miles.

TRIP A: Total distance traveled since the last tripmeter reset.*

TRIP B: Total distance traveled since the last tripmeter reset.*

*To reset the displayed distance to 0 while viewing TRIP A or TRIP B, press the reset switch for a few seconds.

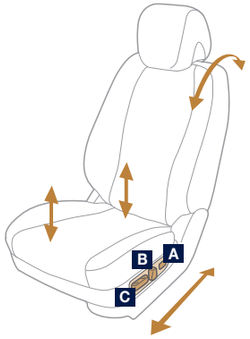

Power Front Seat Adjustment (If Equipped)

A LUMBAR CONTROL

To adjust the lumbar support, press the switch.

B SEATBACK ANGLE

Move the control forward or backward to recline the seatback.

C SEAT HEIGHT AND FORWARD / BACKWARD

Raising/lowering the front of the control will raise/lower the front part of the cushion. Raising/lowering the back of the control will raise/lower the rear part of the cushion.

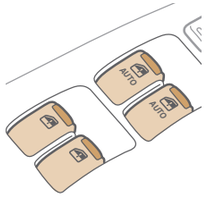

Power Windows

The windows may be opened by depressing the appropriate window switch and closed by pulling up on the switch.

AUTO UP / DOWN (FRONT WINDOWS)

To fully open the window automatically, press the switch fully down. To fully close the window automatically, pull the switch fully up.

NOTE: Ignition switch must be on.

Window Lock Switch

To disable the passenger front and rear power windows, press the window lock switch. To revert to normal operation, press the window lock switch a second time.

NOTE: Ignition switch must be on.

Immobilizer System

The immobilizer system is an anti-theft device, designed to deter automobile theft. Please refer to your Owner's Manual for more information.

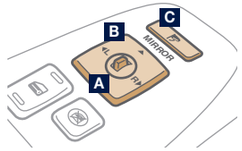

Outside Rearview Mirrors

ADJUSTING

1. Move the select switch **A** to right or left to activate the corresponding mirror.

2. Adjust the mirror angle by depressing the appropriate perimeter switch as illustrated. **B**

3. Place the select switch in the middle position to deactivate the perimeter switch.

POWER FOLDING (If Equipped)

Both left and right outside rearview mirrors can be folded for parking in narrow areas by pressing the outside rearview mirror folding switch. **C**

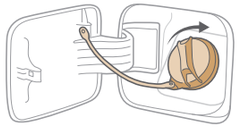

Fuel Cap

After adding fuel, always reinstall the fuel cap fully and make sure it clicks at least three times. Failure to do this may result in the “Check Engine” light illuminating.

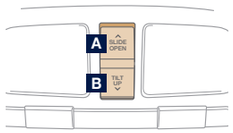

Sunroof Controls

A OPENING/CLOSING THE SUNROOF

Press the SLIDE OPEN button momentarily to activate the one-touch feature. Press the button for less than .5 second intervals to move the sunroof one step at a time. To close the sunroof, press the TILT UP button and hold it until the sunroof is closed.

B TILTING THE SUNROOF

Press the TILT UP button.

To close the sunroof, press the SLIDE OPEN button and hold it until the sunroof is closed.

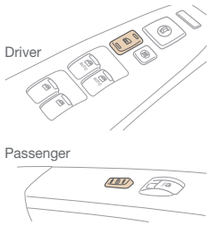

Central Door Locks

The central door locking switch is located on the driver's and front passenger's armrest. It is operated by depressing the door lock switch. If any door is open when the switch is depressed to the LOCK position, the door will remain locked when closed.

AUTOMATIC DOOR LOCKING

Your Hyundai is equipped with a feature that will automatically lock all the doors when the Selector Lever is shifted to the D (Drive) position and the brake pedal is depressed. See your Hyundai dealer to configure this feature.

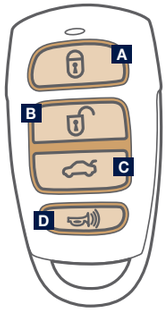

Remote Keyless Entry

A LOCK

Press to lock all doors and arm the alarm. Press again to hear confirmation chirp.

B UNLOCK

Press to disarm the alarm and unlock the driver’s door. Press again within four seconds to unlock all doors.

C TRUNK UNLOCK

Press for longer than one second to release the trunk lid.

D PANIC

Press to activate the horn and flashing lights for 30 seconds. Press again to turn off panic mode.

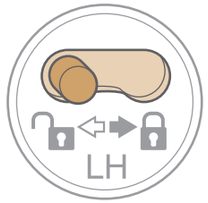

Child-Protector Rear Door Lock

To engage the child-protector feature so that the door cannot be opened from the inside, move the child-protector lever to the LOCK position and close the door. Move the lever to the UNLOCK position when normal door operation is desired.
To open the door from the outside, pull the outside door handle.

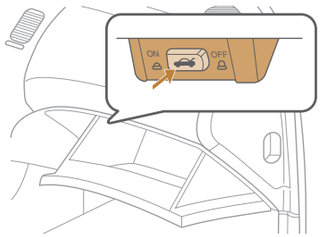

Trunk Lid Control Button

The trunk lid control button, located in the vehicle glove box, is used to prevent unauthorized access to the trunk.

LOCKING

To activate the trunk lock system so that the trunk can only be opened with the master key, perform the following:

1. Open the glove box.

2. Set the trunk lid control button to the OFF position (not depressed). In the OFF position, the trunk cannot be unlocked with the trunk release lever or trunk open button of transmitter. It can only be opened using the master key.

3. Close the glove box and lock the glove box with the master key. When leaving a key with a parking lot attendant or valet, perform steps 1 to 3 above and leave the sub key with the attendant. The sub key can start the engine and operate door locks only. The trunk can never be opened with the sub key.

RELEASING

To release the trunk lock feature, open the glove box with master key and set the trunk lid control button to the ON position (depressed). In this position the trunk will open with the trunk lid release lever or transmitter.

TO UNLOCK USING THE KEY

To open the trunk lid, insert the key into the key slot located on the underside of the trunk lid and turn it clockwise to unlock. The trunk compartment light illuminates when the trunk lid is opened.

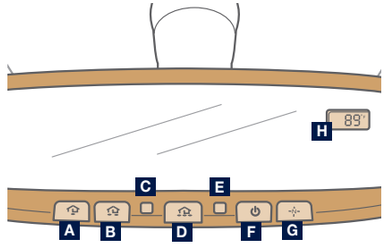

Rear View Mirror/Compass/Homelink®

- **A** Homelink® Channel 1 Button
- **B** Homelink® Channel 2 Button
- **C** Status Indicator LED
- **D** Homelink® Channel 3 Button
- **E** Rear Light Sensor
- **F** Dimming On/Off Button
- **G** Compass Control Button
- **H** Display

To set or operate your Homelink®, refer to your Owner's Manual for detailed instructions.

COMPASS FUNCTION

The Compass can be turned ON and OFF and will remember the last state when the ignition is cycled. To turn the display feature ON/OFF:

1. Press and release the button to turn the display feature OFF.

2. Press and release the button again to turn the display back ON.

Additional options can be set with press and hold sequences of the button and are detailed in the Owner's Manual.

HOMELINK®

See your Owner's Manual for more information

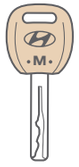

Two Types Of Keys

MASTER KEY (M)

This key is for general use. It will open all locks on your vehicle. One side of the key has the Hyundai logo and the other side has the "M" symbol.

SUB KEY (S)

Similar to the master key, this key will only function in the ignition and the door locks, but it will not operate the trunk and the glove box. One side of the key has the Hyundai logo and the other side has an "S" symbol. Leaving your sub key with a parking attendant will ensure that your vehicle's trunk, trunk lid release, glove box compartment and rear trunk access may not be unlocked in your absence.

Basic Safety Precaution

Whenever operating the vehicle, make sure that you and your occupants are properly wearing your seat belts. Small children should always ride in the rear seat in the appropriate child restraint system (see the Owner's Manual for child safety details). Never place children under 13 years old in the front seats to avoid injury that may result from air bag deployment. Always refer to the Owner's Manual for complete safety precaution information.

Tire Inflation

Check tire pressure at least once a month when the tires are cold. Refer to the tire pressure label for correct pressure. See the Owner's Manual for the correct tire pressure label location.

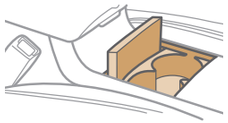

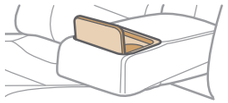

Cup Holders

Cup holders are located on the main console and in the center of the rear seat armrest. The cup holder can be opened by pushing at its top edge.

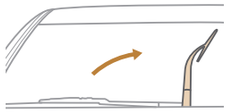

Wiper Blade Replacement

To replace the wiper blades, turn the ignition on and place the windshield wiper switch in the LO position. Turn the ignition switch off when the windshield wiper is in the fully up position. Remove the windshield wiper blade with the LOCK lever pressed. Replace with a new wiper blade.

Adjustable Headrests

To raise the headrest, pull it up.

To lower the headrest, push it down while pressing the lock knob.

To remove the headrest, raise it as far as it can go, then press the lock knob while pulling upward.

Tilt the headrest forward to three different positions by pulling the headrest forward. To adjust the headrest rearward, pull it fully forward to the farthest position and release it.

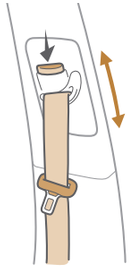

Height Adjustable Front Seat Shoulder Belt

To raise the height adjuster, pull it up. To lower, push it down while pressing the height adjuster button.

AZERA
CUSTOMER DELIVERY CHECK LIST: SALES COPY

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	**DATE**
VIN	

Exterior – Walk around vehicle; check for cleanliness, dents and scratches.
- Confirm tire pressure and oil level has been checked.

Interior – Check for loose papers and cleanliness.
- Assure audio system is at appropriate level, driver's seat is back and tilt steering is in the up position.

The Delivery – Walk around vehicle with customer; point out locking fuel filler lid. Proceed to Trunk area.

☑ **Trunk** – Use remote to open trunk. Demonstrate key operation and trunk release. Point out large opening and low loading height. Also locate:
- ❑ Trunk light
- ❑ Spare tire/tools
- ❑ Emergency fuel filler lid release
- ❑ Emergency trunk release
- ❑ Rear seat release knobs - demonstrate

☑ **Second Row Seating** – Use remote to open rear doors by pushing remote "unlock" selector twice. Point out/demonstrate:
- ❑ Child-protector rear door lock
- ❑ Child seat anchors, seat tether anchors and automatic locking rear seatbelts
- ❑ Center armrest, drink holders, door bottle holders, storage areas, seat back storage

Exit second row, lock car with remote and proceed to Driver´s area.

☑ **Driver's Area** – Use remote to open driver´s door.
- ❑ Adjust seat
- ❑ Fasten seatbelt/adjust shoulder belt anchor height
- ❑ Adjust steering wheel (tilt/telescopic)
- ❑ Adjust active headrest
- ❑ Adjustable pedals (if equipped)

■ Driver's door - point-out/demonstrate:
- ❑ Trunk remote release
- ❑ Power windows/window lock/ power door locks/release
- ❑ Mirror switch – have customer adjust mirrors
- ❑ Bottle holder and indoor storage
- ❑ Remote locking fuel filler lid release
- ❑ Power folding mirrors (if equipped)
- ❑ IMS (Integrated Memory System)

■ Driver's controls (left to right) – demonstrate:
- ❑ Instrument Panel illumination switch
- ❑ TCS Traction Control System (if equipped)
- ❑ Headlights (low/high/high beam flash)
- ❑ ESC Electronic Stability Control (if equipped)
- ❑ Turn signals (left/right)
- ❑ Wiper/washer controls

■ Steering wheel controls – demonstrate:
- ❑ Audio
- ❑ Cruise Control (if equipped)

■ Gauges – point out/explain:
- ❑ Tachometer
- ❑ Speedometer
- ❑ Fuel gauge
- ❑ Coolant temperature gauge

■ Warnings and indicators – point out/explain the following indicators and lights:
- ❑ Check engine – Malfunction Indicator Light (MIL)
- ❑ Airbag warning
- ❑ Anti-lock brake system (ABS) (if installed)
- ❑ Seatbelt warning light (driver's side)
- ❑ Turn signal indicator
- ❑ High beam indicator
- ❑ Immobilizer warning light
- ❑ Automatic transmission position indicator
- ❑ Charging system warning
- ❑ Trunk lid open
- ❑ Door ajar
- ❑ Low fuel level
- ❑ Front fog light indicator

CUSTOMER DELIVERY CHECK LIST (CONTINUED)

☑ **Driver's Area** – (continued)
- ❑ Low oil pressure
- ❑ Low washer fluid level
- ❑ Parking brake/Low brake fluid
- ❑ Cruise control indicators (if equipped)
- ❑ Electronic Stability Control (ESC) indicator (if equipped)

■ Trip Computer – press button repeatedly to cycle through display
- ❑ Distance to empty
- ❑ Average speed (MPH)
- ❑ Average fuel consumption (MPG)
- ❑ Distance traveled

☑ **Center Stack**
- ❑ Clock – set clock
- ❑ OCS (Occupant Classification System) – Explain that children under the age of 13 must ride in the rear seat, properly wearing seatbelts. Refer customer to information in Owner's Manual.
  - ❑ Hazard switch – demonstrate

■ Audio System – explain/demonstrate:
- ❑ Radio – Demonstrate/preset one station. Have customer set one or more stations. Demonstrate XM™ Satellite controls (XM™ comes with 3 months of free service).
- ❑ Equalizer (EQ)
- ❑ CD operation

■ Climate Controls

☑ **Additional Features** – Explain/demonstrate the following features:
- ❑ Seat warmers
- ❑ Illuminated glove box
- ❑ Transmission
- ❑ Bag hook (side of center console)
- ❑ Parking brake
- ❑ Passenger door bottle and storage area
- ❑ Center drink holders
- ❑ Center console (upper and lower storage)

■ Overhead console
- ❑ Rear view mirror/Homelink®
- ❑ Sun visor/vanity mirror
- ❑ Sunglass holder
- ❑ Sunroof (if equipped)
- ❑ Map light
- ❑ 3-way dome light (on/off/door)

Have customer release hood using Hood Release (left side/under dash).

☑ **Engine Compartment**

☑ **Service Department** – Introduce
- ❑ Service Manager
- ❑ Service Advisor
- ❑ Set customer's first service appointment

AUTO LOCK/AUTO UNLOCK – Your new Hyundai Azera is equipped with an Auto Door Lock and Unlock feature. This feature can automatically lock and unlock all the vehicle's doors when a pre-selected condition has been met. To help us tailor the vehicle to your preferences, please take a moment to review the following user-selectable settings for the Auto Door Lock and Auto Door Unlock feature:

■ Auto Lock	■ Auto Unlock
❑ Disabled – The Automatic Door Lock feature is disabled. *(Factory Setting) Standard Power Door Lock function is not affected.*	❑ Disabled – The Automatic Door Unlock feature is disabled. *(Factory Setting) Standard Power Door Lock function is not affected.*
❑ Shift Lever-Linked – Doors **lock** when the shift lever is placed in **Drive (D)**.	❑ Shift Lever-Linked – Doors **unlock** when the shift lever is placed in **Park (P)**.
❑ Speed – Doors **lock** when the car reaches **12.4MPH** (20 km/h).	❑ Key Out – Doors **unlock** when the key is key is removed from the ignition.

Sales Consultant _____ Date _____

Customer _____ Date _____

MAINTENANCE

	Normal Usage		Severe Usage	
Steering Gear Box, Linkage & Boots / Lower Arm Ball Joint	Inspect	7.5K	Inspect	More Frequently
Fuel Lines, Fuel Hoses & Connections	Inspect	7.5K		
Suspension Mounting Bolts	Inspect	7.5K		
Vapor Hose and Fuel Filler Cap	Inspect	7.5K		
Engine Oil and Filter	Replace	7.5K	Replace	3K
Air Conditioner Filter (for Evaporator and Blower Unit)	Replace	every 12 mos. or 10K	Inspect	More Frequently
Air Conditioning Refrigerant	Inspect	15K		
Automatic Transaxle Fluid	Inspect Replace	15K 105K	Replace	30K
Brake Hoses and Lines	Inspect	15K		
Brake Pads, Calipers and Rotors	Inspect	15K	Inspect	More Frequently
Driveshafts and Boots	Inspect	15K	Inspect	7.5K
Exhaust Pipe and Muffler	Inspect	15K		
Power Steering Pump, Belt and Hoses	Inspect	15K		
Fuel Tank Air Filter	Inspect Replace	15K 30K		
Brake Fluid	Inspect	30K		
Drive Belt (Autotensioner, ALT, P/Str'g, A/C, W/pump)	Inspect	30K		
Rear Brake Pads / Linings, Parking Brake	Inspect	30K	Inspect	More Frequently
Vacuum Hose	Inspect	7.5K		
Crankcase Ventilation Hose	Inspect	30K		
Air Cleaner Filter (Engine)	Inspect Replace	15K 30K	Inspect	More Frequently
Coolant	Replace	60K		
Fuel Filter	Replace	37.5K		
Valve Clearance	Inspect	60K		
Electronic Throttle Control	Inspect	30K		
Spark Plugs (Iridium Coated)	Replace	97.5K	Replace	More Frequently

*All Units Displayed In Miles

For Additional Maintenance Schedule Information See Your Owner's Manual

Looking For More Detailed Information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your dealer.

NP150 - M7000 11/06

HYUNDAI